

12"

0.5"

D

EXTERIOR x 1
& INTERIOR OF BAG x 1

0.5"


0.5"

14"

bottom

FOLD LINE

Note: This template is not to scale. Please make sure to cut your pattern to the appropriate dimensions.

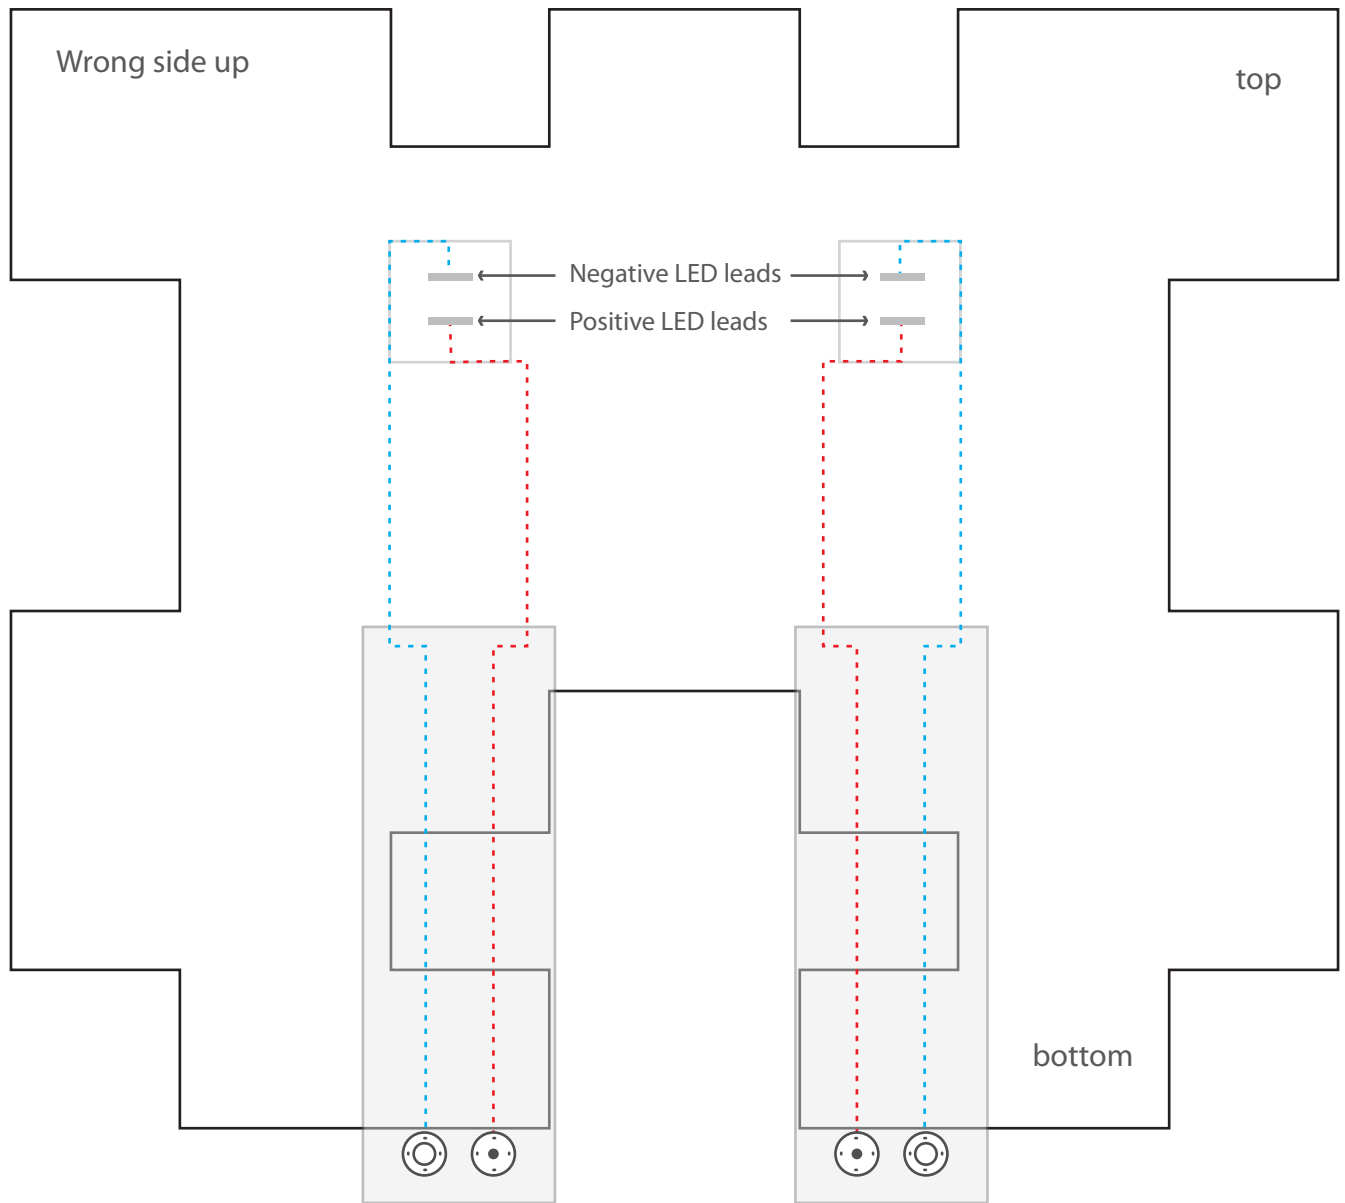

SEWING GUIDE

----- Negative conductive path

----- Postive conductive path



Female snap



Male snap